

Torque Ratings Spring-Return Actuators

RSVP TYPE 1031 SPRING RETURN TORQUE CHART

ACTUATOR MODEL	SPRING TORQUE INCH LBS.	AIR TORQUE (PSI)														
		40	50	60	70	80	90	100	120	125	150	200				
26051SR40	START	1906	2534	3163	3791	4420	5048	5677	6934	7248	8820	11963				
	MIN.	1085	1619	2153	2687	3222	3756	4290	5359	5626	6962	9633				
	END	1277	1905	2534	3162	3791	4419	5048	6305	6619	8191	11333				
26051SR60	START	1796	2425	3053	3682	4310	4939	5568	6825	7139	8710	11853				
	MIN.	306	840	1374	1909	2442	2977	3512	4581	4847	6182	8854				
	END	360	989	1617	2246	2874	3503	4132	5389	5703	7274	10417				
26051SR80	START	3145	2602	3231	3859	4488	5116	6373	6688	8259	11402					
	MIN.	1114	532	1065	1600	2135	2669	3737	4004	5340	8012					
	END	1310	626	1254	1883	2512	3140	4397	4711	6283	9426					
26051SR100	START	3833	3169	3798	4426	5055	6312	6626	8198	11340						
	MIN.	1394	481	1016	1550	2085	3153	3420	4756	7427						
	END	1640	567	1196	1824	2453	3710	4024	5596	8738						
26051SR125	START	5214	3674	4303	5560	5874	7445	10588								
	MIN.	1777	376	911	1979	2246	3581	6253								
	END	2090	443	1072	2329	2643	4214	7357								
26051SR150	START	5710	3807	5064	6378	6950	10092									
	MIN.	2210	489	1558	1824	3161	5831									
	END	2600	576	1833	2147	3719	6861									
26051SR200	START	8400	6146	9289												
	MIN.	2789	873	3545												
	END	3282	1028	4171												
26061SR40	START	1860	2823	3747	5595	6518	7442	8366	10213	10675	12985	17604				
	MIN.	714	1559	2345	3915	4700	5485	6271	7841	8233	10197	14123				
	END	840	1835	2759	4606	5530	6454	7378	9225	9687	11997	16616				
		40	50	60	70	80	90	100	120	125	150	200				